

390376 User Manual (Eng)




It is recommended to read this user manual carefully and keep it for future reference.

Product Overview:

1. Microphone
2. Controls
3. DC Input

Specifications:

- Bluetooth version 5.0
- Charging voltage: 5V
- Lithium battery 300mAh 3.7V
- Working Time: 2-3h
- Operating distance: up to 10 meters
- Frequency: 150Hz-20KHz
- Impedance: 4 Ω
- Power output: 3W
- THD: less than 10%
- SNR: >90dB

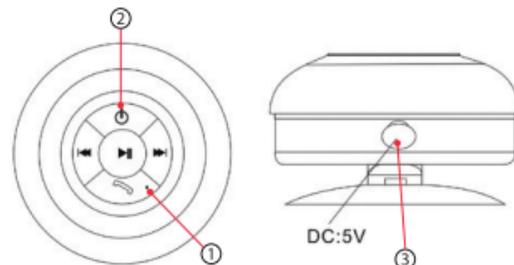

Operation:

Keep pressed the power button to turn on the speaker. The blue light indicator will start to blink showing that it's ready to be paired.

Keep pressed the power button to power off the speaker.

Playing Music via Bluetooth:

From the Bluetooth menu of your device, search for new devices and select "4929" to pair. Once they are paired successfully, you will hear a notification sound and the indicator light will keep on.

Charging:

Connect the charger to an appropriate power source using the supplied cable.

During charging, the red indicator light will stay on. When the speaker is fully charged the indicator light will turn off.

Controls:

	<ul style="list-style-type: none"> • Keep pressed the button to turn on/off the speaker
	<ul style="list-style-type: none"> • Short-press the button to next song. • Long-press the button to increase the volume. (When max volume is reached you will hear a notification sound)
	<ul style="list-style-type: none"> • Short-press the button to previous song. • Long-press the button to decrease the volume.
	<ul style="list-style-type: none"> • Short-press the button to play/pause the music.
	<ul style="list-style-type: none"> • Short-press the button to answer/end a call. • Press twice the button to reject an incoming call. • Press twice the button to redial the last phone number.

Troubleshooting:

Fault	Solution
Unable to pair with other devices.	<ol style="list-style-type: none"> 1. Check whether the speaker is still in the process of search or switch it off and on again. 2. There are too many Bluetooth devices in the proximity that cause difficulty in connection. Turn off other Bluetooth devices. 3. Make sure your device is in "Pairing Mode".
The sound is low or distorted.	<ol style="list-style-type: none"> 4. Check the Bluetooth device volume and then adjust it to an appropriate level. 5. Recharge the battery.
Occasionally the music stops.	<ol style="list-style-type: none"> 6. Check whether the speaker effective transmission range is exceeded or if there is an obstacle between the speaker and other Bluetooth devices.

Warnings:

1. Do not expose this product to rain or damp conditions.
2. Prevent this item from falling as it could cause serious damage.
3. Do not dismantle, repair or modify this product by yourself, contact an authorized specialist.
4. In order to avoid any risk, do not dispose of this product inappropriately as there is a built-in Lithium battery.
5. Clean the speaker with a dry cloth.
6. Do not place this item near sources of heat or expose to direct sunlight.
7. Do not insert any metal objects into this device as there is a risk of causing a short circuit in the unit.
8. Keep out of reach of children.



This symbol both in the product and its user manual indicates that at the end of the devices electrical life, it should be recycled separately from your household waste. There are adequate means to dispose of this material for proper recycling. For more information, contact your local authorities.

