


# 390503

## User Manual (Eng)



It is recommended to read this user manual carefully and keep it for future reference.


### 1. Product Overview:

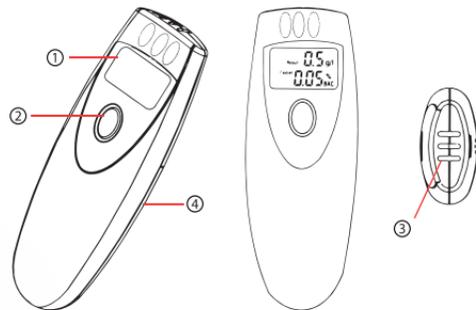

1. LCD display
2. Power button
3. Breath inhaler
4. Battery compartment

### Installing Batteries:


Open the battery compartment lid at the back of the item.  
 Insert two "AAA" batteries with correct polarity as indicated.  
 Replace the battery compartment lid.  
 When the screen flashes that the battery is low, replace the battery.

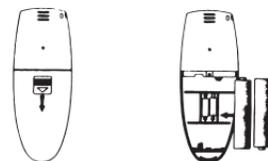

### 2. How to use the alcohol tester:

#### Warm up:

Press the power button once and the tester will turn on with a beep sound.  
 The warm-up symbol will appear on the screen and the countdown from 10 to 0 will start. This means the tester is in warm-up mode.

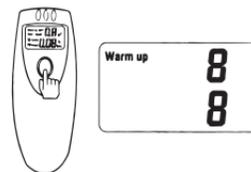

#### Note:

If the first warm-up isn't successful, the tester will reset itself automatically and warm-up again.  
 Clean the item properly before use or if the item hasn't been used for a long period of time. For a successful warm-up, it is recommended press the power button several times.

#### Test:

The "blow" symbol is displayed when the warm-up has been completed and the countdown from 10 to 0 will commence. This means the tester is in testing mode.



Blow into the inhaler for 3-5 seconds and the result will appear on the screen.

The "Caution" symbol will appear if the alcohol concentration is the following:

- 0.02% BAC (or 0.2 g/l) to 0.05% BAC (or 0.5 g/l).
- 0.05% BAC (or 0.5 g/l) to 0.08% BAC (or 0.8 g/l).



The "danger" symbol will appear with an audible alert if the alcohol concentration is the following:

- Equal & over 0.05% BAC (or 0.5 g/l).
- Equal & over 0.08% BAC (or 0.8 g/l).



#### Note:

To obtain a more accurate result, it is recommended to repeat the action 2-3 times

#### Note:

Range: 0.00%-0.19% BAC (0.0-1.9g/l)

#### Auto power off:

After the result has been displayed for 10 seconds, the "OFF" symbol will appear on the screen for a few seconds and then the tester will turn off.  
 If the warm-up isn't successful, the tester will turn itself off automatically.  
 If after the warm-up, there is no breathing into the tester, the result 0 will appear on the screen and after 10 seconds, it will turn itself off.

### 3. Precaution:

1. It is recommended to wait at least 20 minutes after drinking before trying the tester.
2. For an accurate result, do not repeat the test until 3 minutes have passed.
3. Do not use chemicals to clean the tester.
4. Do not blow liquid into the breathing pipe.
5. Do not use any strong substances near the tester such as paint, insecticide or alcohol.
6. Keep the tester away from enclosed environments with contaminated air.

#### IMPORTANT:

Do NOT use any tester as a tool to drink and drive



This symbol both in the product and its user manual indicates that at the end of the device's electrical life, it should be recycled separately from your household waste. There are adequate means to dispose of this material for proper recycling.

For more information, contact your local authorities.

CE  
MADE IN PRC